
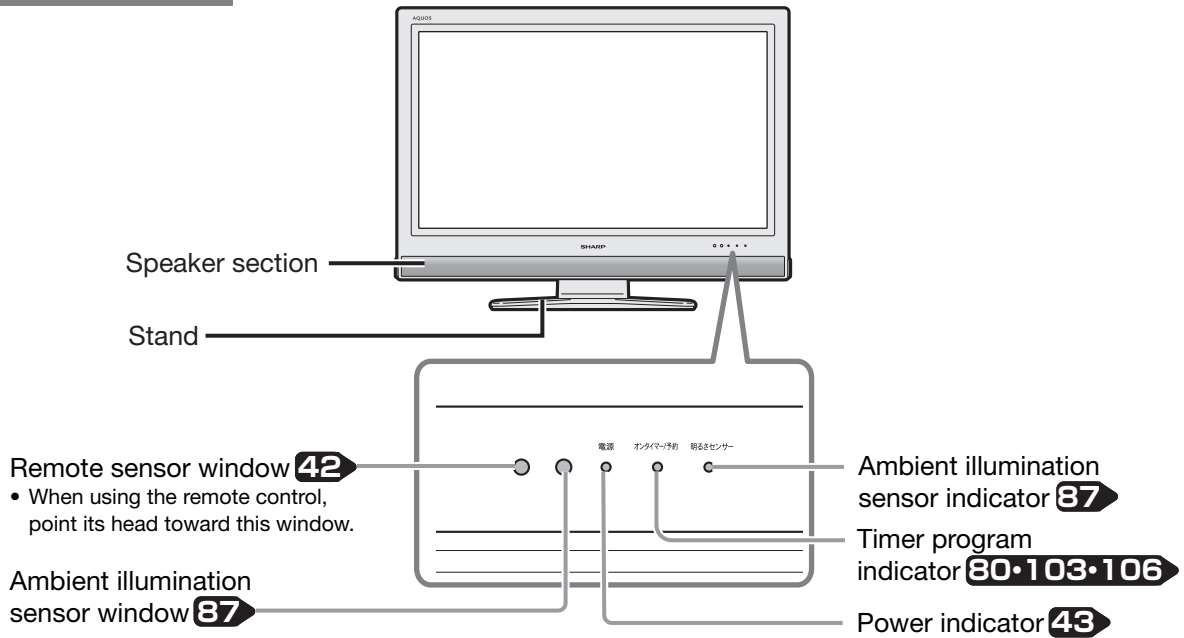


- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view




Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Top view

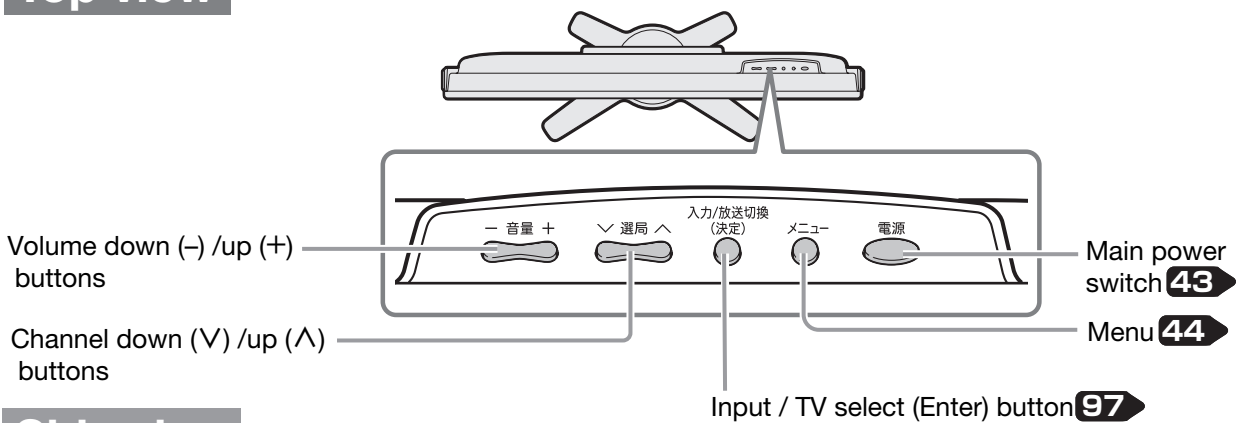


Side view

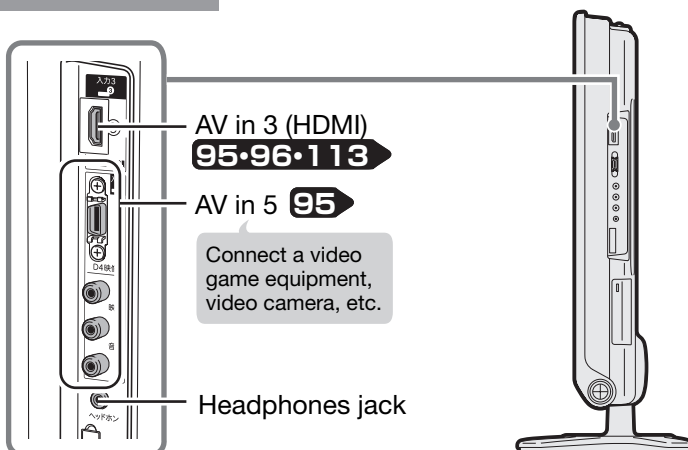


Back view (LC-32D30/LC-26D30)

The illustrations below are those of LC-32D30. LC-26D30 has the same layout of jacks and terminals as LC-32D30.

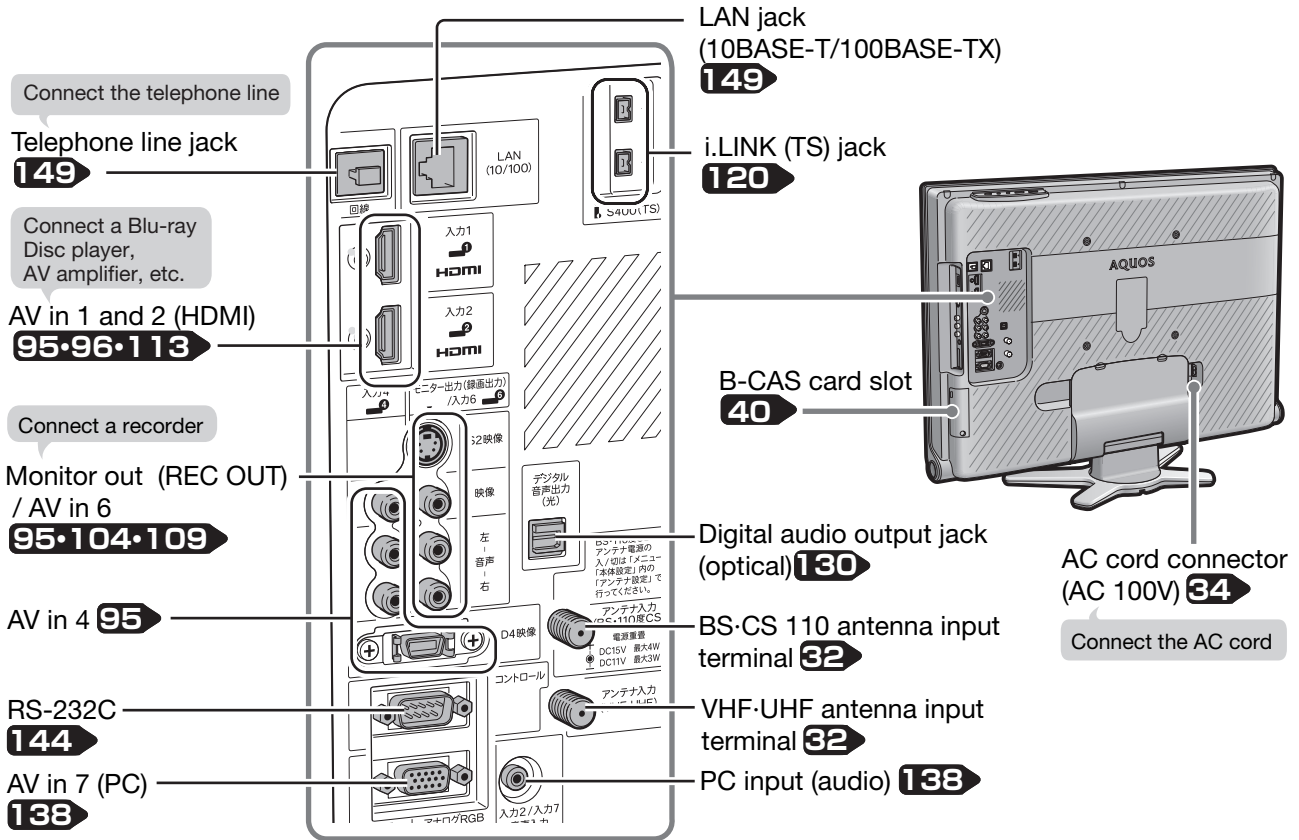

Back view (LC-20D30)

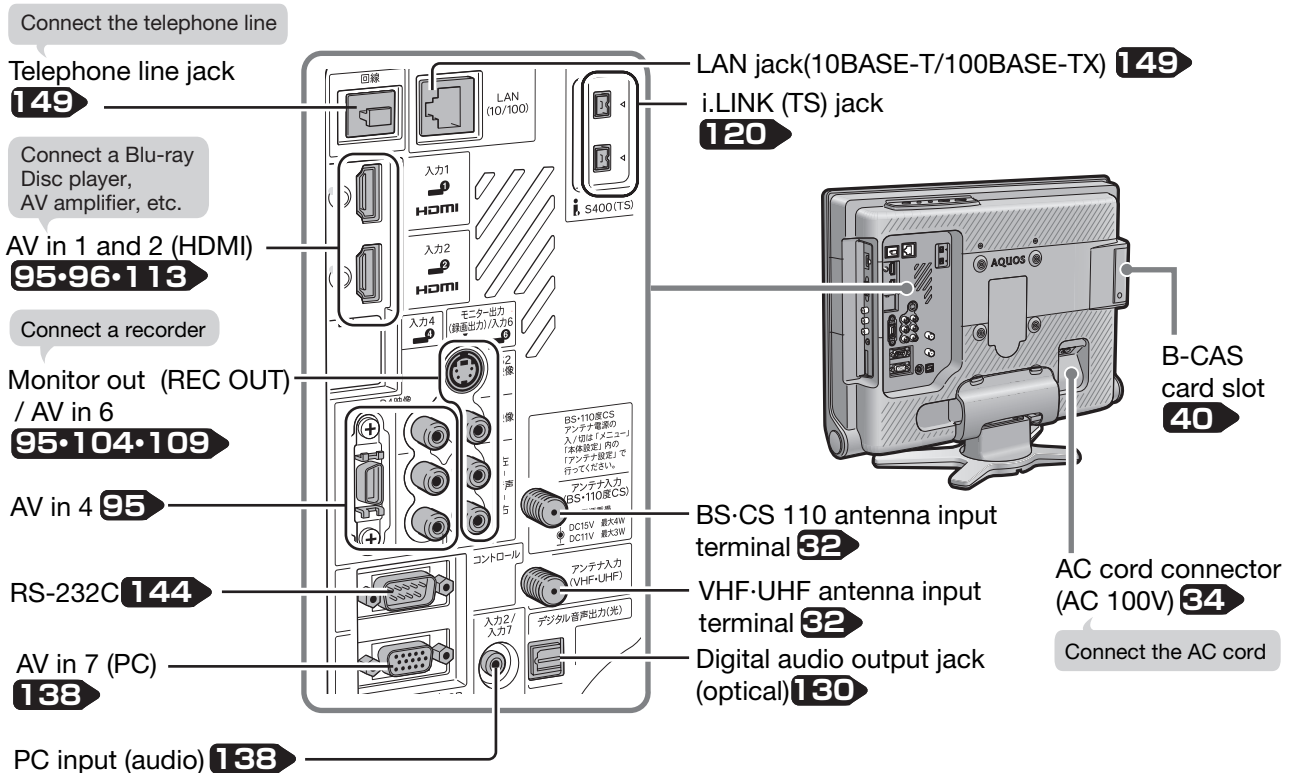

Part Names – Remote Control Unit

Display 64

Press to display or turn off the channel call, etc.

Active/Standby 43

Press to engage the TV set in the active or standby mode.

CATV 65

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

Terrestrial analog select 64

Terrestrial digital select 64

BS select 64

CS select 64

Select the CS digital channel for the first time. 39

Linked data broadcast 77

Press to call the data broadcast linked with the current digital TV program.

Volume up (+)/down (-)

Press to adjust the volume.

Mute

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Program info 76

Press to display detailed information on the current digital program.

EPG 68

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Other on-air programs 69

Press to display the EPG for currently on-air programs only (裏番組).

Finish 44

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Screen mode 84

Press to select the desired screen mode.

AV mode select 36

Press to select the picture/sound setting that best matches the current program.

Freeze 76

Press to freeze the picture.

i.LINK 122

Press to display the i.LINK control panel.

Favorite channel select/register 65

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Familink 112

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Sleep timer 134

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

Digital channel number input 65

Use to select a digital channel by entering the 3-digit channel number.

Familink 112

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Channel select 64

- Press to select a channel.
- Use to input a number for various settings.

Channel up (^)/down (v) 64

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped.

Media select 64

Press to select the desired media (TV, radio, or data).

Input select 97

Press to select the desired input.

Menu 44

Press to display or turn off the menu screen.

The menus can be displayed in English. See 183 for instructions on how to switch the display language.

Cursor (up, down, left, right) 44

Use to select a menu item, column, etc.

Enter/Confirm 44

Press to confirm a selected setting or menu item.

Return 44

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color 70 · 71 · 77

Use to operate EPGs and data program screens.

Picture select 75



Press to select the desired picture when watching a digital multi-picture program.

Caption 75

Press to display, select, or turn off captions when watching a digital program with captions.

Audio select 74 · 75

Press to select the desired audio.

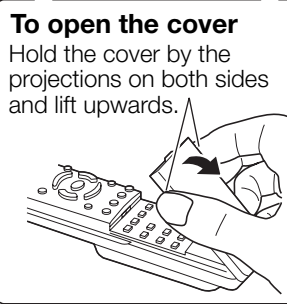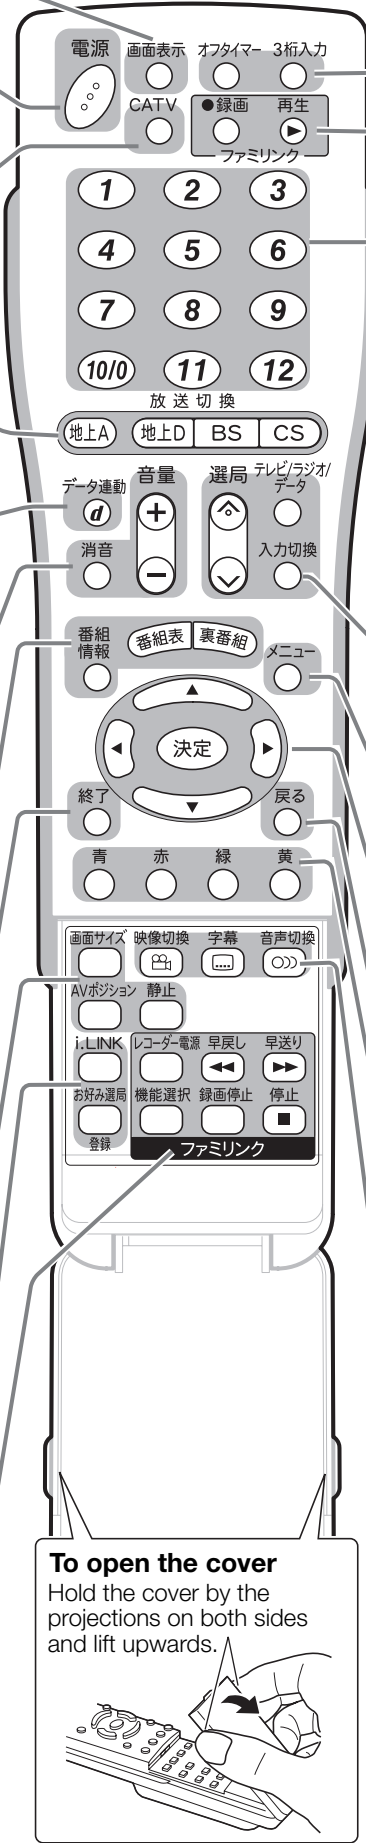

Switching the Display Language to English

メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



★ おしらせ

誤ってメニューを英語にしてしまったときは


- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。


- Press**

1  Display the menu screen.
メニューを表示する
- 2**  Select “本体設定”(Setup)－“Language (言語設定)”.

「本体設定」－「Language (言語設定)」を選ぶ


決定 Enter.
決定する

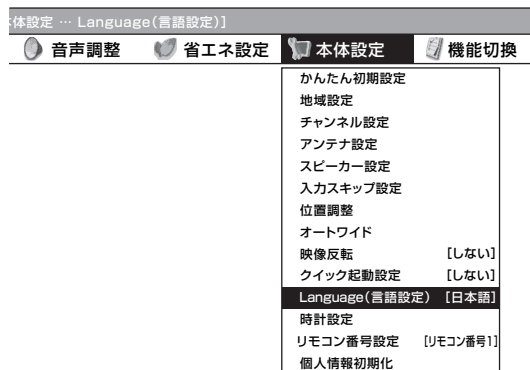


- 3**  Select “English”.

「English」を選ぶ

決定 Enter.
決定する

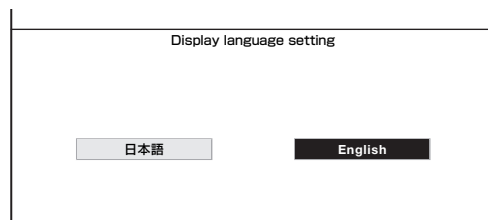

- The menu screen is now displayed in English.
画面表示が英語になります。

- 4**  Finish this operation.
終了する