
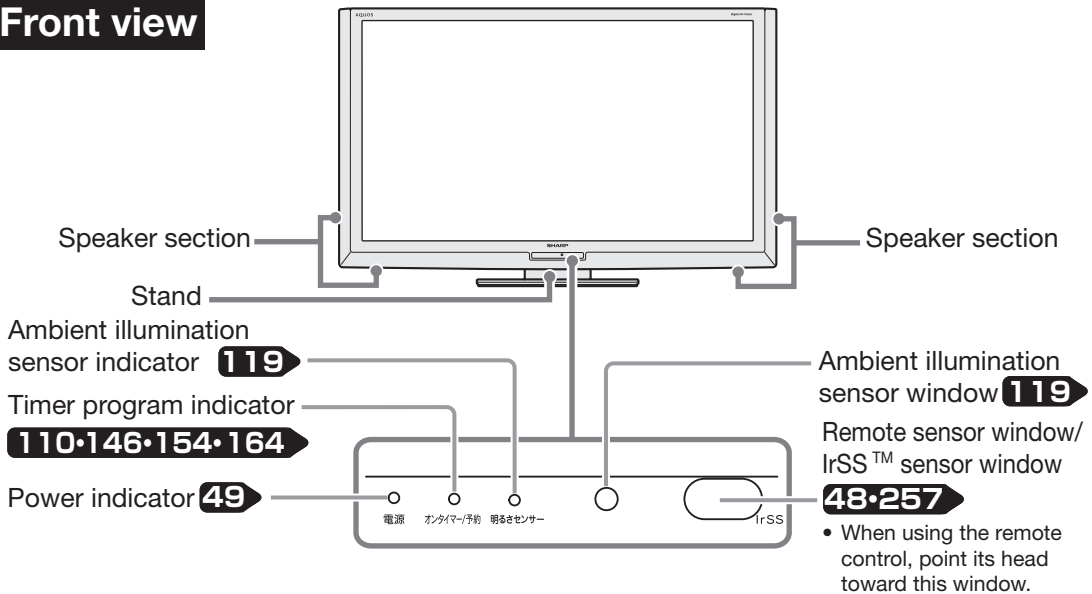


Part Names - Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view



Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.
- LC-60LX1 cannot adjust the LCD panel angle.

Right side view

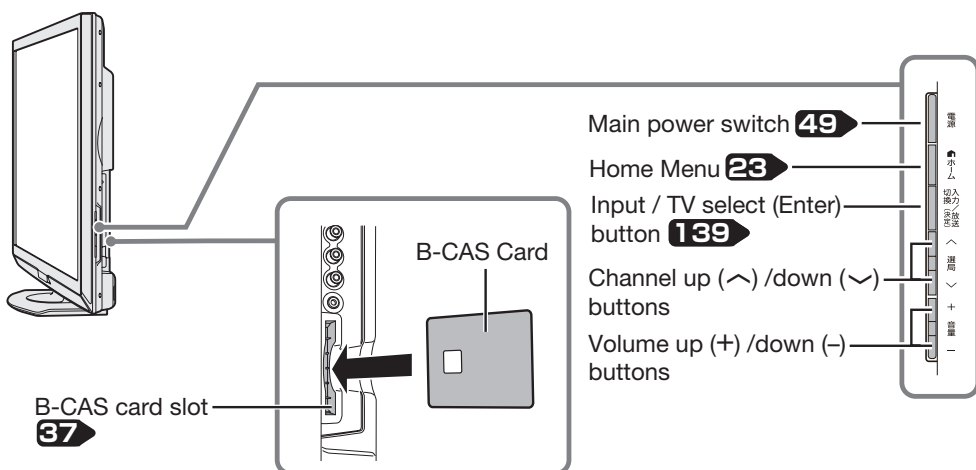

- IC chip side of B-CAS card is turned to a front side of this product, and B-CAS card is inserted.

はじめに

準備

番組を見る

ハイブリッドレコーダで録画・再生

ファミリンクで録画・再生

ゲームオーディオ・パソコンをつなぐ



本機をさらに活用する

故障かな仕様・寸法図など

English Guide

Back view

The illustrations below are those of LC-52LX1.
 LC-60LX1/LC-46LX1/LC-40LX1 has the same layout of jacks and terminals as LC-52LX1.

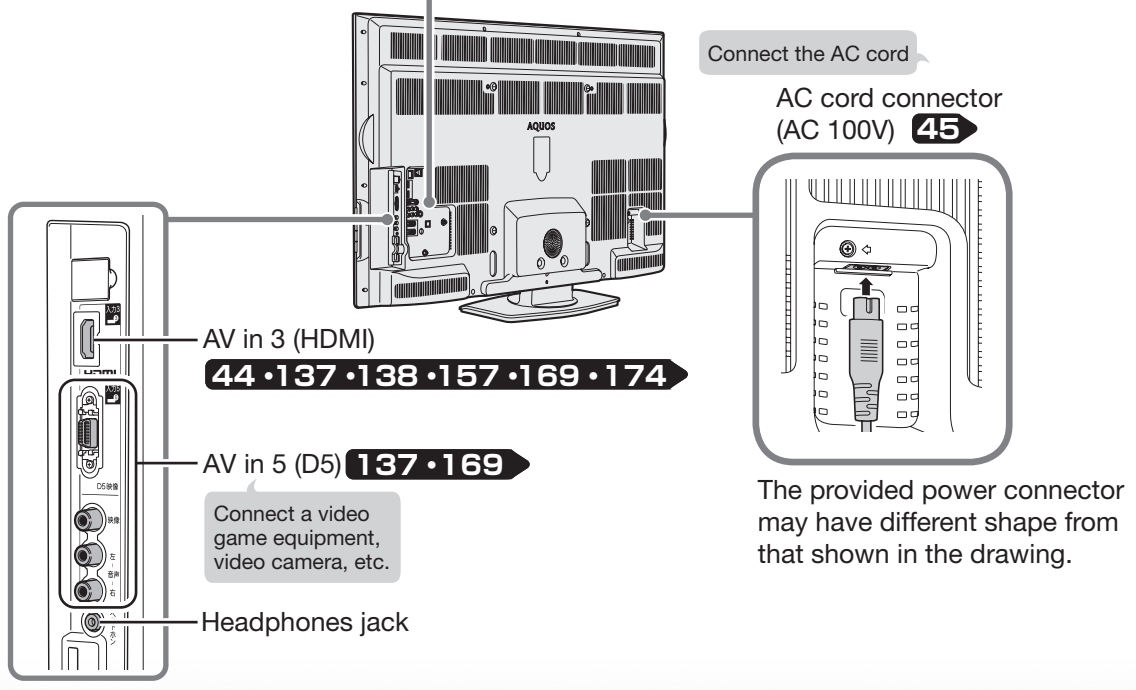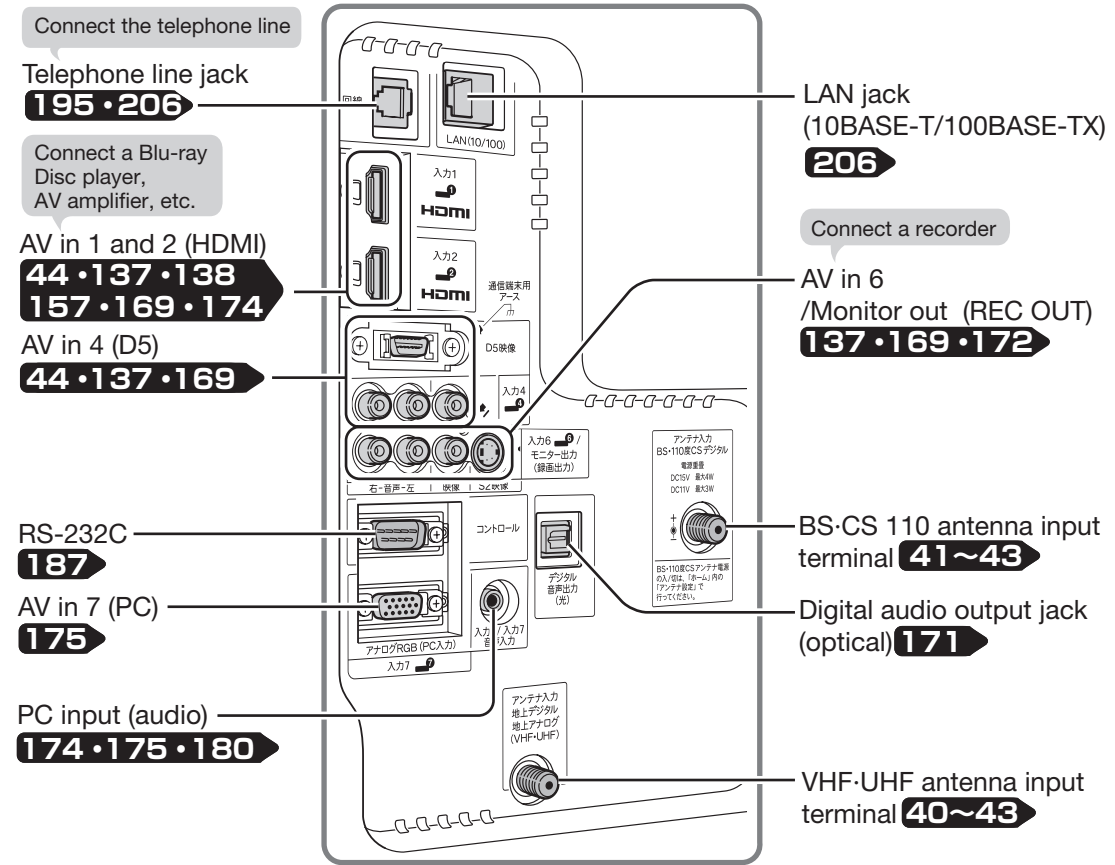

Part Names - Remote Control Unit

Active/Standby 49

Press to engage the TV set in the active or standby mode.

CATV 86

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

地上D Terrestrial digital select 82

BS BS select 82

CS CS select 82

地上A Terrestrial analog select 82

Select the CS digital channel for the first time. 55

Mute 83

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) 83

Press to adjust the volume.

Linked data broadcast 109

Press to call the data broadcast linked with the current digital TV program.

AV mode select 116

Press to select the picture/sound setting that best matches the current program.

番組表 EPG 89

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

ホーム Display the "Home" Menu 26

Press to start some useful operations of the TV.

番組情報 Program info 108

Press to display detailed information on the current digital program.

Finish 26

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Display 84

Press to display or turn off the channel call, etc.

Screen mode 113・176

Press to select the desired screen mode.

Digital channel number input 85

Use to select a digital channel by entering the 3-digit channel number.

Internet 212・233

Press to connect to the internet.

VOD 241・246

Press to display the VOD control panel.

Channel select 83

- Press to select a channel.
- Use to input a number for various settings.

Channel up (^)/down (v) 83

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped.

Input select 139

Press to select the desired input.

Familink 161・165~168

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Sleep timer 185

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

Display the Tool Menu

Cursor (up, down, left, right) 26

Use to select a menu item, column, etc.

決定 Enter/Confirm 26

Press to confirm a selected setting or menu item.

Return 26

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color 92~93

Use to operate EPGs and data program screens.

To open the cover

Hold the cover by the projections on both sides and lift upwards.



はじめに

準備

番組を見る

レコーダ・プレイヤー
で録画・再生

ファミリンク
で録画・再生

ゲームオーディオ
パソコンをつなぐ

本機をさらに
活用する

故障かな仕様
寸法図など

English
Guide

Buttons under the cover Hold the cover by the projections () and lift.

お好み選局

Favorite channel select/register

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

映像切換

Picture select 102

Press to select the desired picture when watching a digital multi-picture program.

字幕

Caption 102

Press to display, select, or turn off captions when watching a digital program with captions.

音声切換

Audio select 101・102

Press to select the desired audio.



2画面

Split screen 104

Press to switch between the split screen mode and the normal screen mode.

操作切換

Operable screen 104

Press to switch the operable screen when the TV set is in the split screen mode.

静止

Freeze 107

Press to freeze the picture.

テレビ/データ

Media select 82

Press to select the desired media (TV or data).

Familink 161・165~168


Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Switching the Display Language to English

ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.

ホームメニューなどの画面表示を英語にすることができます。

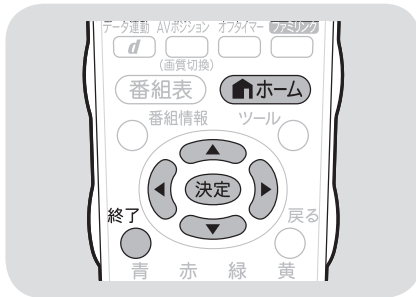


誤ってホームメニューを英語にしてしまったときは

- ・ ホームメニューから「Setup」 - 「View Setting」 - 「Language」を選んで決定し、「日本語」を選んで決定すると日本語になります。


1 Select “設定” (Setup) on the Home menu.
ホームメニューから「設定」を選ぶ

Press and select with

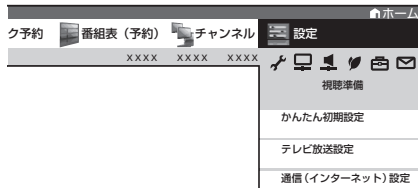


2 Select “ (視聴準備)” (View Setting).
 (視聴準備) を選ぶ

Select with

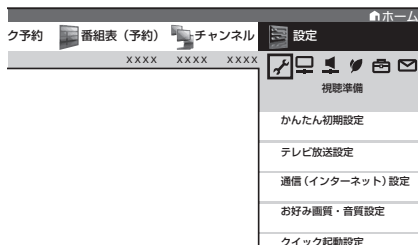

3 Select “Language (言語)”.
「Language (言語)」を選ぶ


Select with

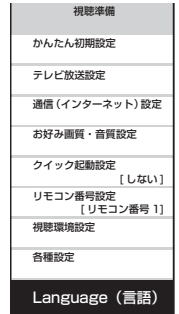

Press

4 Select “English”.
「English」を選ぶ
Enter.
決定する

Select with

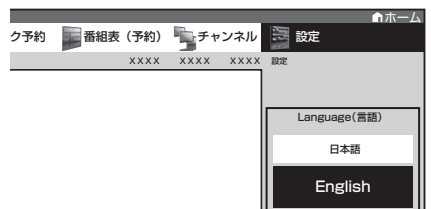

Press

- ・ The menu screen is now displayed in English.
- ・ 画面表示が英語になります。

5 Finish this operation.
終了する

Press

はじめに

準備

番組を見る

ヒューマンレジャー
で録画・再生

ファミリンク
で録画・再生

ゲーム・オーディオ
パソコンをつなぐ

本機をさらに
活用する

故障かな仕様・
寸法図など

English
Guide