
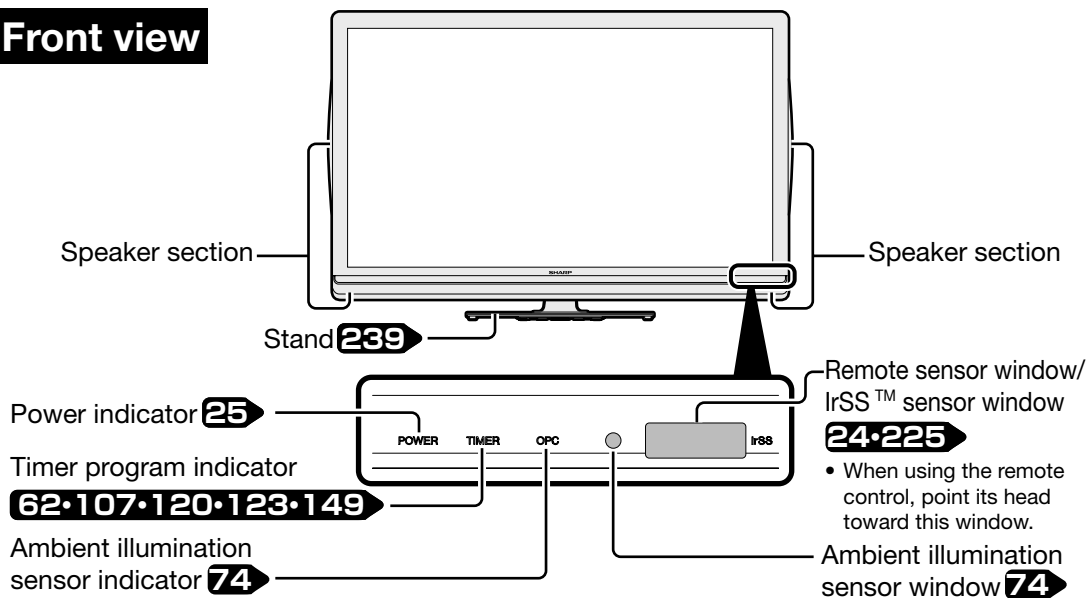


English Guide

Part Names

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view



Adjusting the LCD panel angle

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Right side view

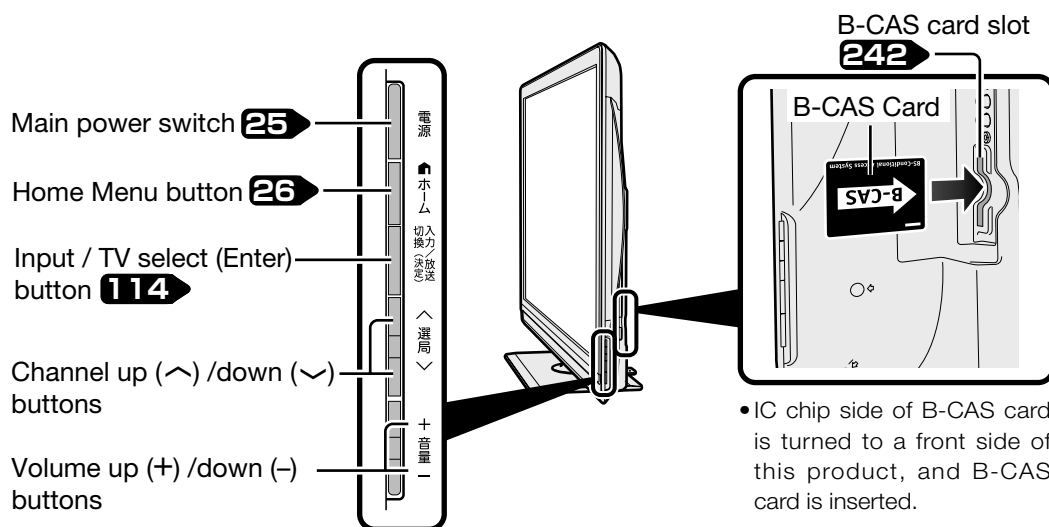

Back view

The illustrations below are those of LC-52LX3.
LC-60LX3/LC-46LX3/LC-40LX3 has the same layout of jacks and terminals as LC-52LX3.

LAN jack
(10BASE-T/100BASE-TX)

171・197

Connect a Blu-ray Disc player, AV amplifier, etc.

AV in 1 and 2 (HDMI)

112・248・249・251・252・256・258

AV in 4 (D5)

251・253・256

RS-232C

259

AV in 7 (PC)

259

PC input (audio)

131・258・259

USB terminal

135・174・231・316

AV in 3 (HDMI)

112・248・249・251・252・256・258

AV in 5 (D5) **251・253・256**

Connect a video game equipment, video camera, etc.

Headphones jack

AV in 6 **251・254・256**

Connect a recorder

AV in 6 / Monitor out (REC OUT) **251・255・256・257**

BS-CS 110 antenna input terminal **244~247**


Digital audio output jack (optical) **249・257**

VHF-UHF antenna input terminal **244~247**

Connect the AC cord

AC cord connector (AC 100V) **260**

The provided power connector may have different shape from that shown in the drawing.

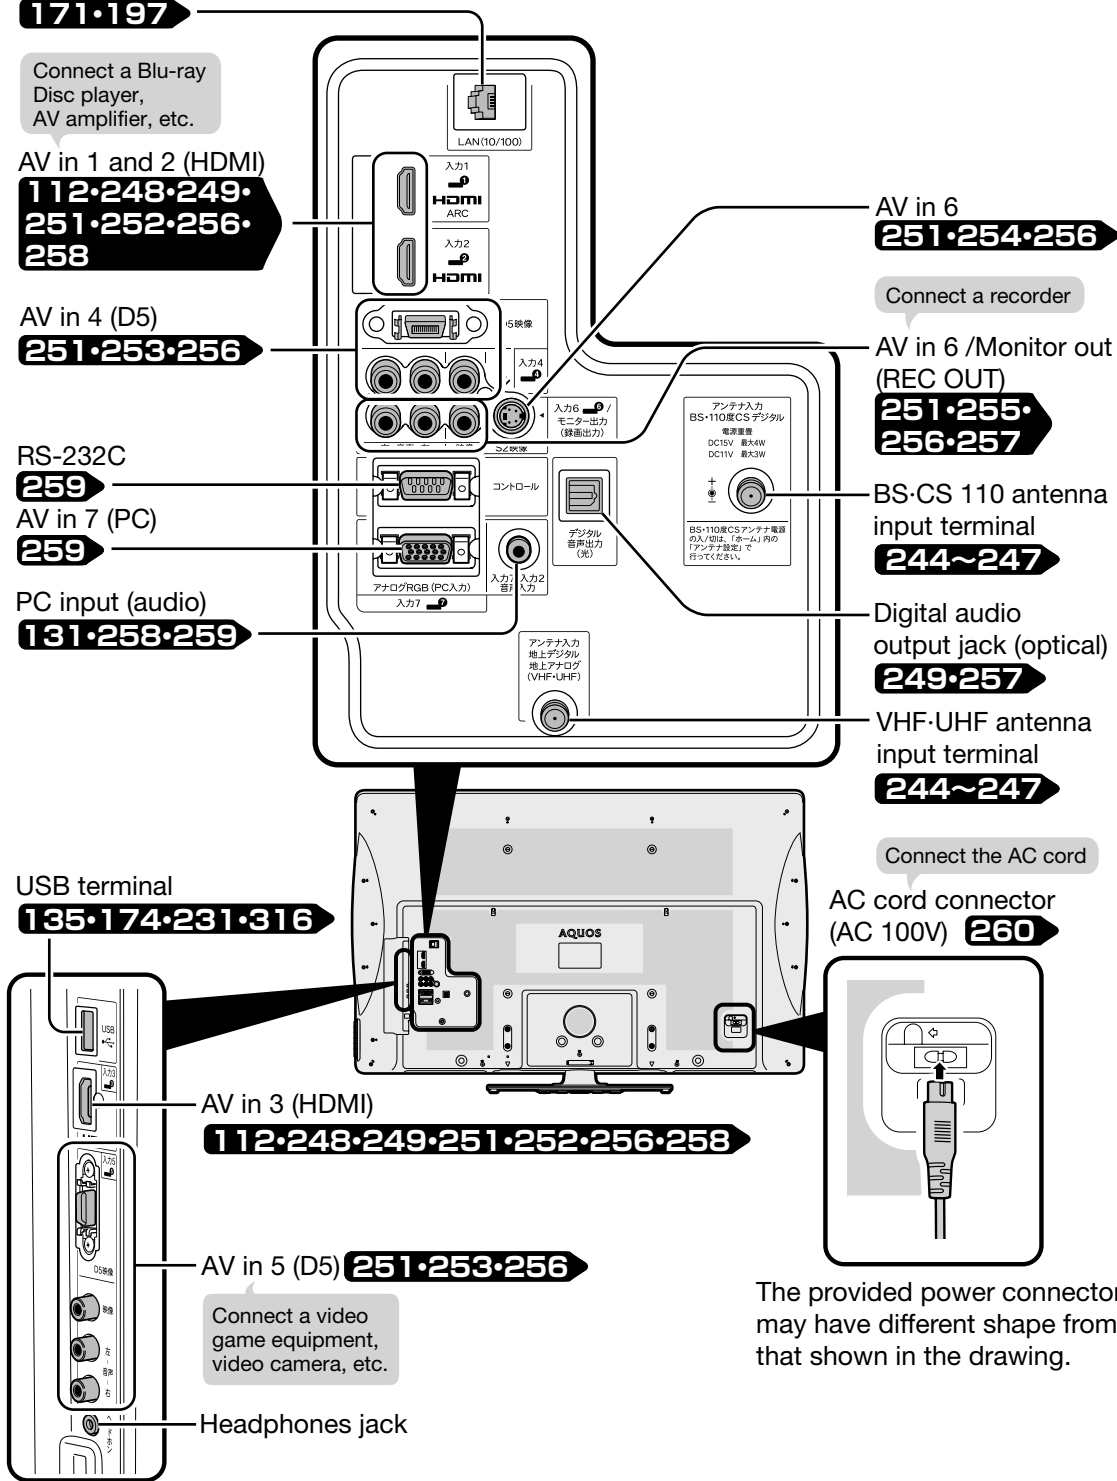

Remote Control Unit

See Page 32 for how to select a program.

Active/Standby 25

Press to engage the TV set in the active or standby mode.

Recommended programs select 50~52

Press to select a program which the TV set recommends.

Power saving mode 91

Select power saving settings.

CATV 34

Digital channel number input

Display 36·37·321

Press to display or turn off the channel call, etc.

AV mode select 69

Freeze 33

Channel select 32·202

- Press to select a channel.
- Use to input a number for various settings.

Terrestrial analog/Terrestrial

Digital/BS/CS 32

Select the CS digital channel for the first time. 268

Mute 32·202

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Volume up (+)/down (-) 32·202

Press to adjust the volume.

EPG 43·106·120·148


Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

Finish

Press to finish menu operation, etc.
* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Sleep timer 88

Media select 32·35·203

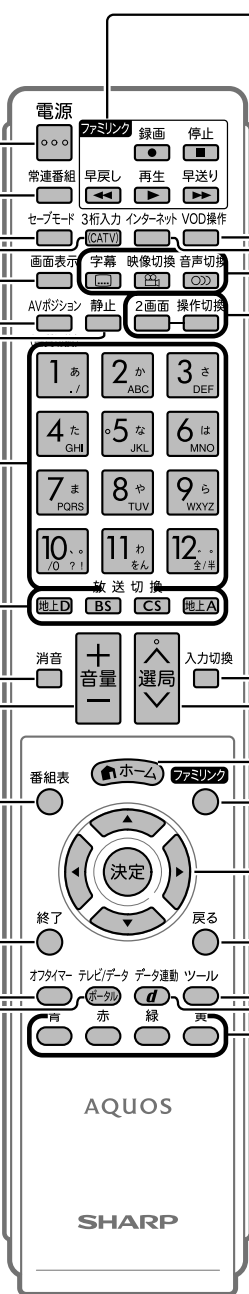

Familink

102·104·105·108·109·112·144·146·147·158·159·161

Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

Display the operation panel of VOD 207·211·221

View the Internet or IPTV 187·202·206·208·210

Audio select 53·54·203

Picture select 54

Caption 54·203

Split screen 56~57

Press to switch between the split screen mode and the normal screen mode.

Operable screen 58

Press to switch the operable screen when the TV set is in the split screen mode.

Input select 114

Channel up (Δ)/down (∇) 32·41·202·285

Press to select channels in the current network, media and CATV channels in the ascending or descending order.
* CATV channels are factory set to be skipped.

Display the "Home" Menu 26·27

Cursor (up, down, left, right) 26·27

Enter/Confirm 27

Return

Display the Tool Menu 30

Linked data broadcast 35·203

Color 35·44·45·94

Use to operate EPGs and data program screens.


Switching the Display Language to English ホームメニューなどの言語を英語にする

- Using the Home menu screen, you can switch the on-screen display language to English.
ホームメニューなどの画面表示を英語にすることができます。



◇おしらせ◇

誤ってホームメニューを英語にしてしまったときは

- ホームメニューから「Setup」 - 「 (View Setting)」 - 「言語 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

1

Press
 and
select with



Select “設定” (Setup) on the Home menu.

ホームメニューから「設定」を選ぶ



2

Select with



Select “ (視聴準備)” (View Setting).

「 (視聴準備)」を選ぶ



3

Select with




Press



Select “Language (言語)”.

「Language (言語)」を選ぶ

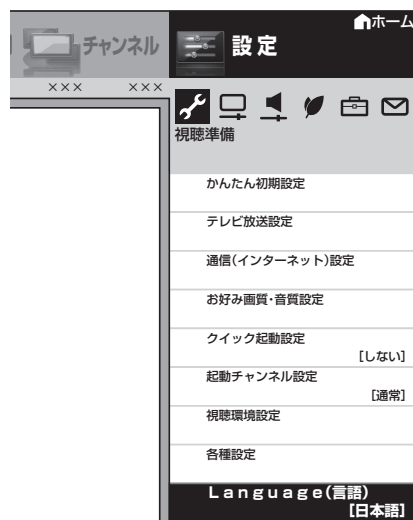

4

Select with



Press



Select “English”.

「English」を選ぶ

Enter.

決定する



- The menu screen is now displayed in English.
- 画面表示が英語になります。

5

Press



Finish this operation.
終了する