



レコーダーのリモコン 「録画リスト」を押す

****残時間: ┣┏┏Ѕ **時間 **分					
BS 103 SH	łK h		🍋 春のイタリア観光		
/[*]午後10:00 60分 ** 1⇒◎					
■● で前のページ ●●● で次のページ					
375.00 1	# 400	# #10	3	## +0 F	# 400
番組	番組2	番組3	番組4	番組ち	番組り
1 (252)	2	3	4	5	6
番組7	番組8	番組9	番組10	番組11	番組12
7		9	10	11	15
番組13	番組14	番組15	番組16	番組17	番組18
13	14	15	18	17	18

テレビ画面に録画リストが映る



B-HD-EDT03-W7x





B-HD-EDT03-W7x





レコーダーのリモコン 「停止」を押す

HDDの再生画面が消える



<u>HDDランプが白色に点灯する</u>