


Entering characters using the handwriting pad

Parts and functions

The handwriting pad is set to enter characters when the cursor is in any part of the character entry area.

[Single-frame pad]

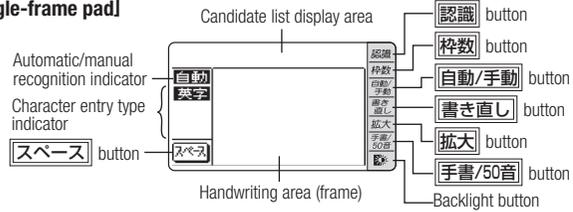

 
- Touching the **枠数** button switches the single-frame pad to the dual-frame pad or frameless pad.

Entering characters using the single-frame pad


Example: Enter a Japanese word “持つ” from a Japanese-English dictionary.

- Press **英和/和英** and then **▼** to move the cursor to the Japanese entry area.

The handwriting pad is now switched to enter kanji and kana.




- Use the stylus to write “持つ” in the handwriting area.

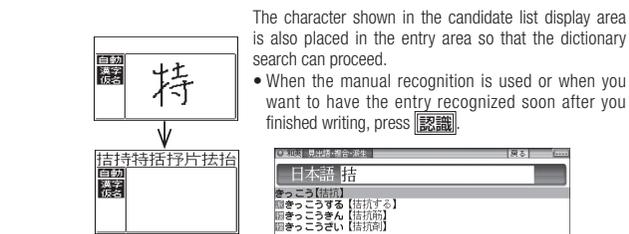


- If the character in the entry area is not the one you desired, use the stylus to touch and select the desired character in the list.

The character in the entry area changes.

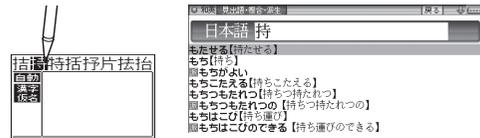

- If you cannot find the character in the list, touch **書き直し** or press **後退** to erase it and redraw it on the pad.

- Likewise, enter “つ” in the entry area.

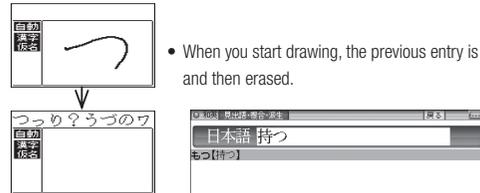

- Press **検索/決定**. The details screen appears.


Entering characters using the frameless pad

Example: Enter the word “clump” in an English-Japanese dictionary


- Before entering the word in an English-Japanese dictionary, touch **枠数** to switch the pad to the frameless pad. *

* You can only switch to the frameless pad when entering alphabet characters.

- Use the stylus to write the word “clump” in the handwriting area.

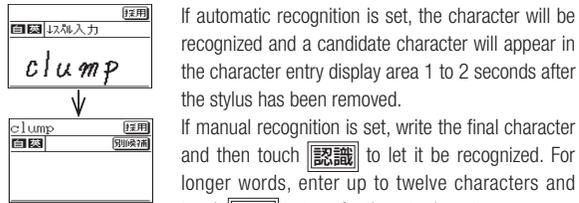

- If the word is correctly recognized, touch **採用** to transfer it to the entry area.

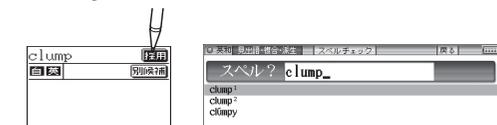

- If the word is not correctly recognized, use the following method.

<Switching characters>

If the number of recognized characters is correct and one of the characters is incorrect, touch the incorrect character. Candidate characters will be displayed below the entry area. Touch the correct character to replace the incorrect character to the correct one.



<Selecting from candidates>

When the number of recognized characters (and/or the characters themselves) is incorrect, touch **別候補** and then select a correctly spelled word from the displayed candidates.



Points on writing handwritten characters

Paying attention to the following points will ensure that handwritten characters are easily recognized.

- Write each individual stroke clearly. Ensure that characters have the correct number of strokes.
- Write clearly and do not use short or conventional forms. Avoid writing sloping characters.
- On the single-frame or dual-frame pad, write lower case characters smaller to distinguish between identical-looking upper and lower case characters such as upper case “C” and lower case “c”. Small characters such as the small “つ” should also be written smaller.
- Write English letters in block form and do not attach ornamentation to the ends of strokes.
- When using frameless entry, write English characters separately, one at a time. You cannot write in cursive style or return to previously formed characters to add dots or crosses.
- When using frameless entry, write words on a single line. You cannot write on two lines.
- When writing letters, do not press hard; always write lightly.

Using the **◀** mark on the screen

Appearance of the **◀** mark on the details screen indicates more information related to the entry is available, such as example sentences, explanations, notes, illustrations, diagrams, tables, and videos.

By pressing **例/解説** in screens where this mark is displayed, the mark will display inverted.

When there are multiple marks, move to the desired mark by using **▲**, **▼**, **▶**, or **◀**. By pressing **検索/決定**, the contents are displayed. To exit, press **戻る** twice.

Listen to audio


When the **◀** mark appears, audio of the displayed information can be played back.

Press **◀** to select the first mark, and the color of the mark is inverted.

Press **▲**, **▼**, **▶**, or **◀** to move the highlight to the desired mark and press **検索/決定** (or touch the mark) to play back the contents.

Example: Play back the audio using “英会話とっさのひとつと辞典”.

- Press **辞書メニュー**, use **▶** to select “英語系 I”, and then use **▼** to select “英会話とっさのひとつと辞典”. Press **検索/決定** until the details screen is displayed.

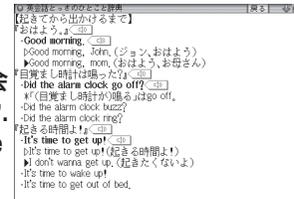

- Press **◀** and the mark becomes inverted (**◀**). Each time you press **検索/決定**, the audio plays.



If several **◀** marks appear, press **▼** or **▶** to move the cursor to the desired mark and press **検索/決定**.

By highlighting an English word and pressing **検索/決定**, you can look up the word in English-Japanese dictionary and play back the audio.

◆ Press **戻る** to stop the audio during play. Press **戻る** and the color of **◀** reverts to non-inverted.

◆ Use **音量小** or **音量大** to first set the volume to low, then adjust it to the desired level.

Selecting functions by touching

You can select various functions by touching the screen with the stylus, (or highlighting by dragging).

- Press **英和/和英**.
- Enter the word (Eg.: “header”) in the “スペル?” field, and press **検索/決定**.
- Touch the starting point “文” and drag to highlight the words up to the end point “ど”.

- Touch the function to execute (Eg.: “マーカー (マーカーを引きます)”) (mark user-selected words).

The marker color selection window appears.

- Select the marker color to use (green, yellow, pink, orange, purple).

The words are registered in the word dictionary and marked in the selected color.

- To select a different function such as Audio or S-jump, select the desired function in Step 4 by touching it.

Entering a text memo

When using a microSD memory card, insert it before switching to the Text Memo screen. The unit exits Text Memo mode when a card is inserted or removed while on the Text Memo screen.

Cards should be inserted or removed when on the Home screen.

Example: Enter “パラオ (Palau) は、風光明媚な国です。”

- Press **Home** and then select “テキストメモ” (Text Memo).
- Touch **力** on the handwriting pad to select the character type. Then enter “パラオ” and confirm it by pressing **検索/決定**.
 - Kana cannot be entered in a text memo using 50-character kana entry.
- Press **音量大** once or twice to display the full width symbol palette, and then select “ (” to enter it.
- Touch **a** on the handwriting pad to switch the character type. Then press **機能**, **P**, **A**, **L**, **A**, and **U** to enter “Palau”.
- Repeat step 3 to enter “) ”.
- Touch **あ** on the handwriting pad to switch the character type. Then enter “は、” and press **検索/決定**. “、” is entered when **文字大** is pressed.
- Enter “ふうこうめいびな” and then press **▲**. The entered characters change to “風光姪雛” with “風光” in red characters and “姪雛” in blue characters. Red characters indicate the current conversion target.
- Since “風光” is correct, press **検索/決定** to move the conversion target to the next block. “姪” turns red and becomes the conversion target.

- Select “明” using **▼** or **▲** and then press **検索/決定**. “姪” changes to “明”, and “雛” turns red, indicating that it is now the conversion target.

- Since “雛” is not a conversion segment delimiter (i.e. a phrase), it needs to be changed. Press **一括検索** or **◀** to contract the phrase. “雛” changes to “美名”, and “美” turns red.

- Select “媚” using **▼**, and then press **検索/決定**. Then select “な” in the same way and press **検索/決定** again.

The entered characters change to “風光明媚な”.

- Enter “くにです”, select “国です” using **▼**, and then press **検索/決定**.

- Press **文字小**, enter “。”, and then press **検索/決定**.

- When text entry is finished, save the data.

- Press **切替** to display the file menu, and then select “名前を付けて保存”. The file save screen appears.
- Touch **本体** or **カード** as necessary, (or press **切替**) and select memory.
- Enter a file name in the entry area and press **検索/決定**. The file is saved with the entered name.

- Press **Home** to exit Text Memo.

Note: Operation may not always proceed as described above due to the learning function.

For details on using Text Memo, see “テキストメモ for Brain 使用説明” in the manual.