



Layout

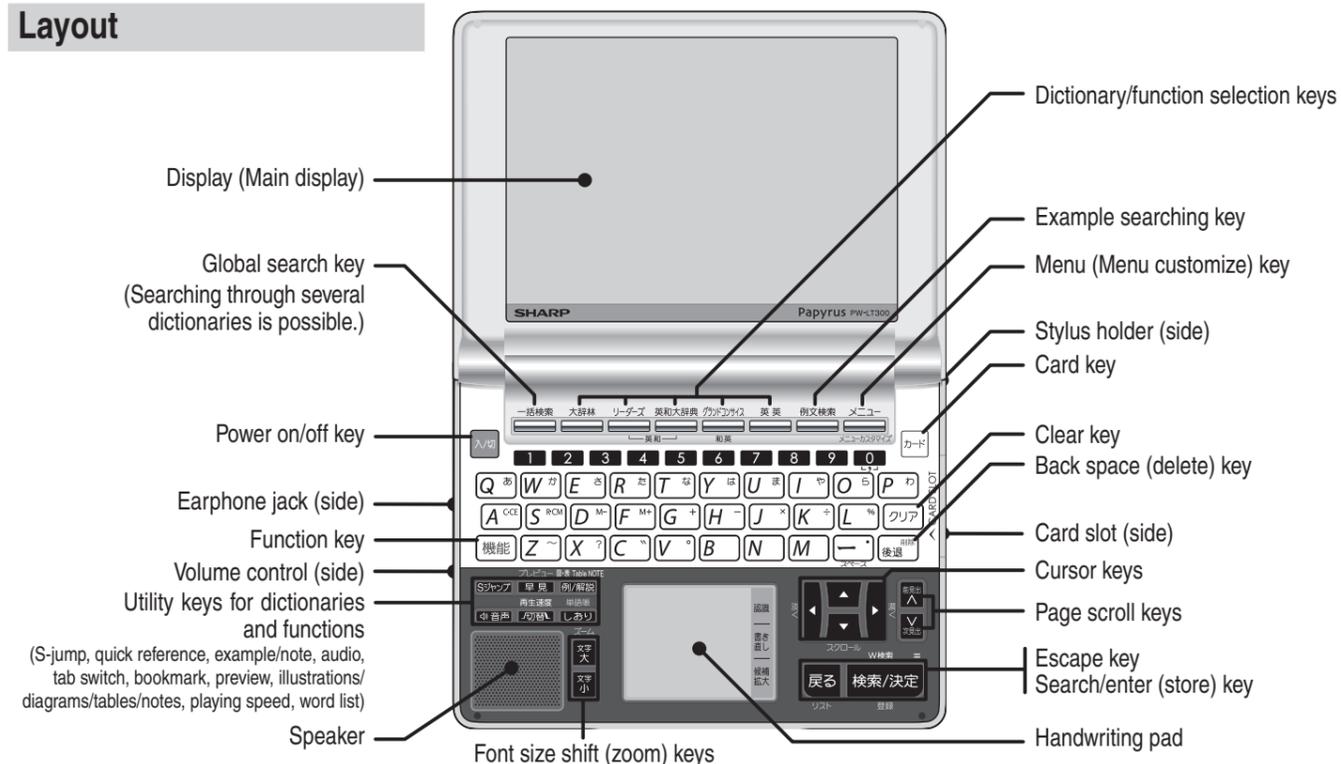

Using the handwriting pad

Parts and functions

The handwriting pad is set to enter characters when the cursor is in any part of the character entry area.

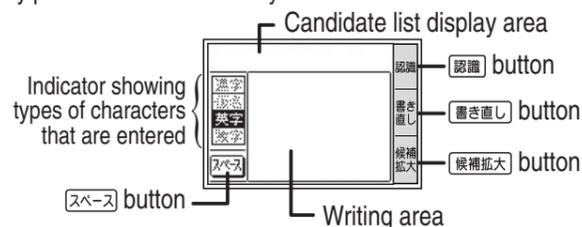

Entering characters using the pad

 
You can enter a character of an unknown Japanese word by tracing it, then look it up in the dictionary.

Example: Look up “葦鹿” in the Japanese-English dictionary to find its pronunciation and English translation.

1 Press **[メニュー]** **[0]** **[0]** **[3]**.

The entry/selection screen of **グランドコンサイズ和英辞典** appears, with the cursor placed over the spelling entry area.

The handwriting pad is set to the English character entry mode.



2 Use the stylus to draw “葦” on the handwriting pad.

The character shown in the candidate list display area is also placed in the entry area so that the dictionary search can proceed.



 
3 If the character in the entry area is not the one you desired, use the stylus to touch and select the desired character in the list.

The character in the entry area changes.

- If you cannot find the character in the list, touch **[書き直し]** or press **[後退]** to erase it and reenter it on the pad.

4 Likewise, enter “鹿” in the entry area.

When you start drawing, the previous entry is confirmed then erased.



You can find kana spellings of the kanji, as well as their English translations.


- Kanji, hiragana, katakana, alphabet, and numerical characters can be entered.

Using the PW-LT300 for the first time


Insert the batteries using the procedure below before using the PW-LT300 for the first time.

To insert the batteries

1 Set the battery replacement switch on the bottom of the unit to the “解除 (交換時)” position.

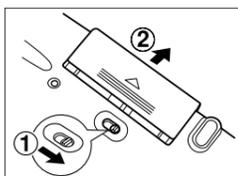

2 Remove the battery cover as shown in the diagram.

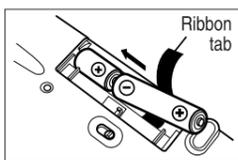


3 Insert the batteries included with the unit.

Make sure the battery polarity is correct.

- Insert the batteries over the ribbon tab being sure not to cover the end of the tab.


4 Replace the battery cover as shown in the diagram.

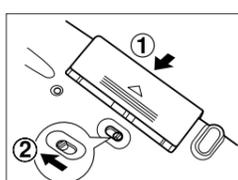


5 Set the battery replacement switch to the “ロック (使用時)” position.

6 Open the unit and press **[入/切]** to turn the power on.

The calibration screen for the handwriting pad appears.

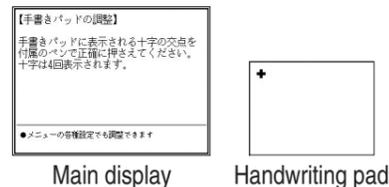

- If the power cannot be turned on:
 - Make sure the battery replacement switch is in the “ロック (使用時)” position, then press **[入/切]** again.
 - If the power still cannot be switched on, try performing steps 1 through 6 in the above procedure again.
- 7 Pull out the stylus, extend it, and use it to accurately touch the center of the “+” character displayed on the handwriting pad.

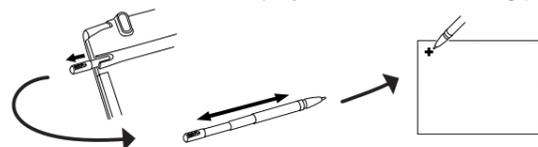

- Touch the center of the “+” character as it appears in four different locations.

The LCD contrast adjustment screen appears.

8 Adjust the LCD contrast of the main display using **[淡く]** (**[濃く]**) and **[濃く]** (**[淡く]**).

9 The LCD contrast of the handwriting pad can be adjusted by touching **[淡く]** and **[濃く]** displayed on the pad.



10 When done, press **[検索/決定]**.

The key sound (beep) on/off screen appears.

11 Select **[Y]** or **[N]** to turn the key sound on/off.

Kana input screen appears.

12 Press **[Y]** to select alphabet character input or press **[N]** to select Japanese input.

Selecting a dictionary/function in the menu display

Press **[メニュー]**.

The menu display (dictionaries/functions selection display) appears.

The menu display (dictionaries/functions selection display)



Menu operation

The menu display consists of a list of classified menu items each with a two digit number (00 - 06) to the left.

When you press **[メニュー]** to open the menu display, “①英語系 (English dictionaries)” is selected and the color of the number is inverted (black and white reversed).

Press **[上]** or **[下]** to move the cursor (indicated by the color-inverted number) and choose a different dictionary/function.

Individual menu items of each classified menu are displayed on the right.

Selecting a menu item

- Select using the cursor keys and **[検索/決定]**

1 Move the cursor (color-inverted number) using **[上]** or **[下]** to the classified menu you wish to choose and press **[検索/決定]** or **[右]**.

- To return the cursor to the classified menu, press **[左]**.

2 Move the cursor using **[上]** or **[下]** to the dictionary/function you wish to use and press **[検索/決定]**.

The display of the dictionary/function you chose appears.

- Select using alphanumeric keys

1 Press the keys (**[00]**, **[01]**, **[02]** to **[06]**) that correspond to the number shown to the left of the classified menu (**[00]**, **[01]**, **[02]** to **[06]**) you wish to choose.

The cursor will be displayed on the individual menu of the classified menu you chose.

2 Press the alphanumeric key that corresponds to the characters shown to the left of the dictionary/function you wish to use.

The display of the dictionary/function you chose appears.

- When the cursor is on an individual menu, return the cursor to the classified menu by pressing **[戻る]** or **[左]**.

Global search function

You can search for a word in several target dictionaries.

Input the Japanese or English spelling and find a definition from the target dictionaries.

As you type, candidates for matching narrow (filter search). If there are still many candidates after inputting the whole word, you can switch to exact search to browse only the exact word you wish to have defined.

Example: Global search for the word “advantage.”

1 Press **[一括検索]**.

The global search input display appears.



2 Press **[▼]**.

Input “advantage” in “Spelling?”.

As you type, candidates for matching narrow.



3 Press **[切替]** to search by exact search.

The list of words corresponding to your input appears.

If you wish to modify the entry, press **[切替]** to return to the filter search display and input again.

4 Select the desired word using the number keys.

The detailed display of the word appears along with its definitions.

- To return to the previous display, press **[戻る]**.



Preview display function

If many candidates are listed for a word and it is difficult to decide which word is the correct one, the preview display will help you by providing a brief note about each word.

Each time you press **[機能]** **[プレビュー]** (**[早見]**), the preview display is turned on or off.

(The preview display is turned off in this display example.)



Example search function


You can search for an example sentence that includes the input Japanese or English word.

Search by English word

Input an English word and search for an example sentence that includes the input word. Up to three English words can be input and an example sentence searched for that includes all three words.


Example: Input “children” and “school” and search for an example sentence.

1 Press **[メニュー]** **[0]** **[6]** **[1]**, and then press **[▼]** to move the cursor to the spelling input column.

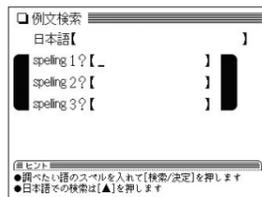

2 Input “children,” press **[▼]** and then input “school.”

To input another keyword, press **[▼]** to move to the next row.

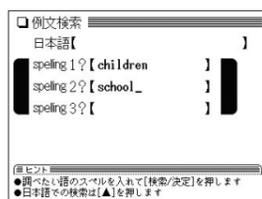


3 Press **[検索/決定]**.

An example sentence including the keyword(s) appears.

The dictionary name containing the example sentence appears at the top of the display as a tab.

4 Press **[切替]** to choose the dictionary you desire.

Each time you press **[切替]**, the dictionary/function (tab at the top of the display) is switched and the example sentence from the corresponding dictionary/function appears.

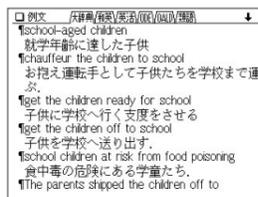

Using **[]** (tabs) at the top of the display


When you use **スーパー大辞林** or other dictionaries, the **[]** mark is displayed at the top of the detailed display.

The tab indicates what information, such as a definition, is displayed at that time. Display of several tabs indicates more information is available related to your search. If several tabs are displayed, press **[切替]** to switch the display and view the contents.

Example: Switch tabs on the detailed display of the dictionary **ジーニアス英和大辞典**.


1 Press **[メニュー]** **[0]** **[0]** **[2]** **[検索/決定]** **[1]**.

The detailed display of “a, A” appears and three tabs are displayed at the top of the display.

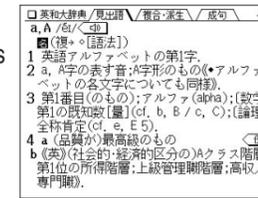

2 Press **[切替]**.

The “**複合・派生** (compound/derivative)” tab is selected and the compounds/ derivatives of the entry are displayed.

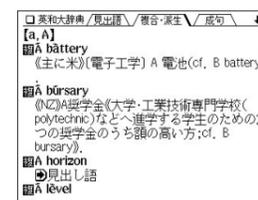

Using the mark **[]** on the display

Appearance of the marks **[例]**, **[解説]**, **[NOTE]**, **[図]** or similar on the detailed display indicates more information related to the entry is available, such as example sentences, explanations, notes, illustrations or diagrams.

Press **[例/解説]** to select the first mark and the color of the mark is inverted.

Press **[▲]**, **[▼]**, **[▶]**, **[◀]** to move the highlight to the desired mark and press **[検索/決定]** to display the contents.

To exit, press **[戻る]** twice.

When the **[]** mark appears, audio of the displayed information can be played back.

 
Press **[音声]** to select the first mark and the color of the mark is inverted.

Press **[▲]**, **[▼]**, **[▶]**, **[◀]** to move the highlight to the desired mark and press **[検索/決定]** to play back the contents.

Example: Play back the audio using “TOEIC® TEST MASTERY 2000.”

- Be sure to adjust the playback volume control at the right side of the unit to around the medium position.

1 Press **[メニュー]** **[0]** **[0]** **[9]**, and then press **[2]** **[1]** **[3]** to select the desired item.



TOEIC is a registered trademark of Educational Testing service (ETS). This (publication/product/website) is not endorsed or approved by ETS.

2 Press **[切替]** to switch to the example sentence tab.




3 Press **[切替]** again.

The “**成句** (idiom)” tab is selected and the related idioms of the entry are displayed.

- Choose the desired idiom by pressing the number keys and the translation of the idiom is displayed.

- Press **[切替]** one more time to return to the detailed display of the entry.

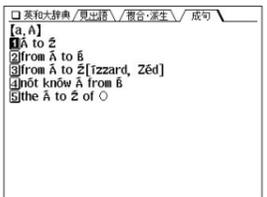

Press **[音声]** and the mark becomes inverted (**[]**). Each time you press **[音声]**, the audio plays.

If several **[]** marks appear in the display, press the **[▼]** or **[▶]** keys to move the cursor to the desired mark and press **[検索/決定]**. The word is inverted and its sound played using Text-to-Speech (TTS: synthesized voice).

- Press **[戻る]** and the color of **[]** reverts to non-inverted.


- Press **[戻る]** to stop the audio during play.

- Be sure to adjust the playback volume control at the left side of the unit to around the medium position before playing a sound and then adjust to an appropriate level.

Adjusting the playback speed

1 Press **[メニュー]** **[0]** **[6]** **[7]** **[7]**.

The playback speed setting display appears.

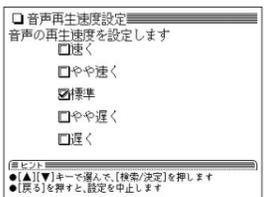

2 Press **[▲]** or **[▼]** to move the “**✓**” mark to select the playback speed (the default is “標準”) and then press **[検索/決定]**. The playback speed is set and the main menu display appears.

Playback speed can also be adjusted by pressing **[切替]** (**再生速度**) when the audio mark or a word is inverted.

SHARP CORPORATION

PRINTED IN CHINA
OGS9701290/III
TCADZ0226EHZZ