

 
Using the PW-N8100 for the first time

Before using the PW-N8100 for the first time, insert the rechargeable battery and charge it by following the procedure below.


To insert the rechargeable battery

1 Remove the battery cover on the bottom of the unit.


Hold the part of the battery cover and pull it in the direction of arrow ①. Then remove the battery cover by pulling it up in the direction of arrow ②.

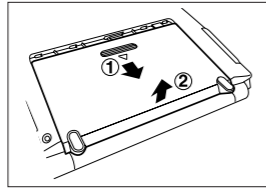

2 Insert the rechargeable battery (EA-BL10) included with the unit.

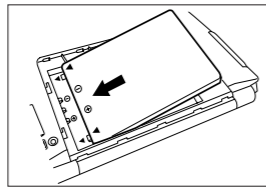


3 Replace the battery cover.

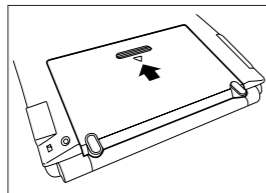

To charge the battery

1 If the power of the unit is turned on, (or something is displayed on the screen) press to turn the power off.

2 Connect the AC adaptor EA-80 to the unit by following procedure ① - ②. (AC 100V only)

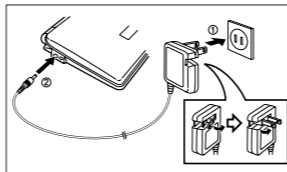

3 When the battery is fully charged, charging stops and the charging lamp turns off.

- The battery normally takes about four hours to fully charge.

(Charging time will vary depending on operating conditions and the temperature.)

4 Disconnect the AC adaptor from the socket on the unit and the power socket.

To turn the unit on

Press to turn the power on. The menu display (dictionaries/functions selection display) appears.


When you turn the power on for the second and subsequent time, the display reappears looking exactly as it did before the unit was turned off.

Selecting a dictionary/function in the menu display

Press .

The menu display (dictionaries/functions selection display) appears.

The menu display (dictionaries/functions selection display)

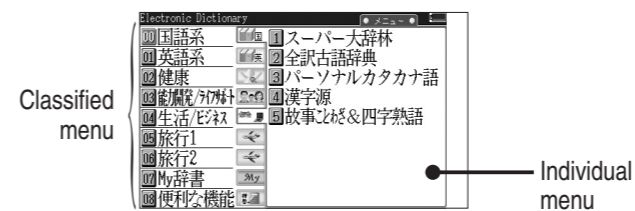

Menu operation

The menu display consists of a list of classified menu items each with a two digit number (00 - 08) to the left.

When you press to open the menu display, “00 国語系 (Japanese dictionaries)” is selected and the number is outlined in red.

Press to move the cursor (indicated by the red outline around the number) and choose a different dictionary/function.

Individual menu items of each classified menu are displayed on the right.

Selecting a menu item

- Select using the cursor keys and

1 Move the cursor (red outline around number) using to the classified menu you wish to choose and press or .

- To return the cursor to the classified menu, press .

2 Move the cursor using to the dictionary/function you wish to use and press .

The display of the dictionary/function you chose appears.

- Select using number keys

1 Press the keys (00, 01, 02 to 08) that correspond to the number shown to the left of the classified menu (00, 01, 02 to 08) you wish to choose.


The cursor will be displayed on the individual menu of the classified menu you chose.

2 Press the number key that corresponds to the characters shown to the left of the dictionary/function you wish to use.

The display of the dictionary/function you chose appears.

- When the cursor is on an individual menu, return the cursor to the classified menu by pressing or .

Layout

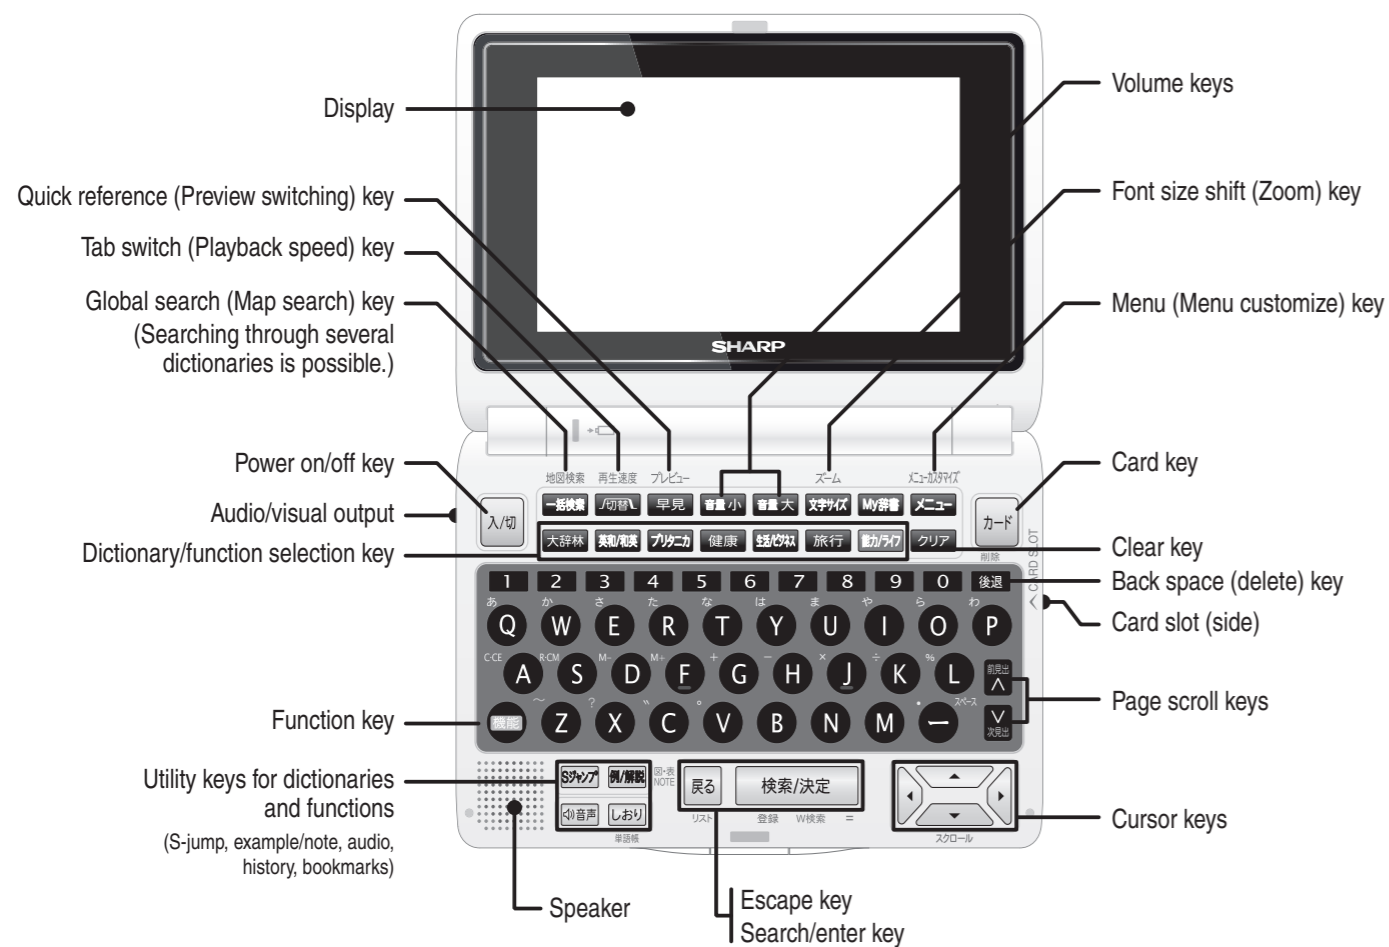

Global search function

You can search for a word in several target dictionaries.


Input the Japanese or English spelling and find a definition from the target dictionaries.

As you type, candidates for matching narrow (filter search). If there are still many candidates after inputting the whole word, you can switch to exact search to browse only the exact word you wish to have defined.

Example: Global search for the word “advantage.”

1 Press .


The global search input display appears.

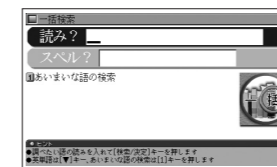

2 Press .

Input “advantage” in “スペル?”.

As you type, candidates for matching narrow.

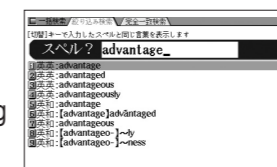

(The preview display is turned off in this display example.)

See Preview display function.

3 Press to search by exact search.

The list of words corresponding to your input appears.

(The preview display is turned off in this display example.)

If you wish to modify the entry, press to return to the filter search display and input again.

4 Select the desired word using the number keys.


The detailed display of the word appears along with its definitions.

- To return to the previous display, press .




Preview display function


If many candidates are listed for a word and it is difficult to decide which word is the correct one, the preview display will help you by providing a brief note about each word.

Each time you press (Preview), the preview display is turned on or off.

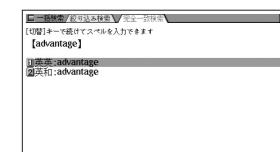

Using (tabs) at the top of the display

   
When you use  or other dictionaries, the  () mark is displayed at the top of the detailed display.

The tab indicates what information, such as a definition, is displayed at that time. Display of several tabs indicates more information is available related to your search. If several tabs are displayed, press  to switch the display and view the contents.



Example: Switch tabs on the detailed display of the dictionary 英和辞典.


1 Press    .

  The detailed display of “a, A” appears and three tabs are displayed at the top of the display.

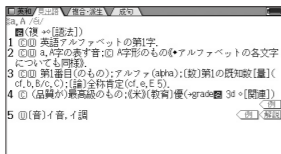 



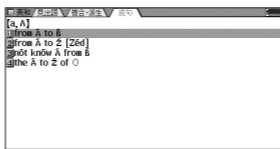
2 Press .


The “ 複合・派生  (compound/derivative)” tab is selected and the compounds/derivatives of the entry are displayed.

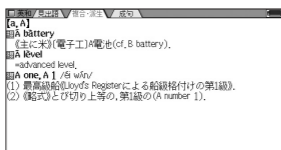

3 Press  again.

The “ 成句  (idiom)” tab is selected and the related idioms of the entry are displayed.

 







- Choose the desired idiom by pressing the number keys and the translation of the idiom is displayed.
- ◆ Press  one more time to return to the detailed display of the entry.


S-jump function

You can search through the contents for the definition or meaning of a word on the detailed display.

  Example: Use S-jump from the 英和辞典 display.


1 Press     and input “あいさつ /aisatsu” and then press .

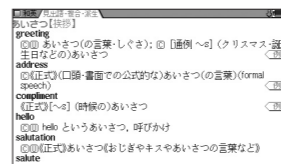

The display of “あいさつ” in the dictionary  英和辞典 appears.



2 Press .

  Operation guide message of S-jump function.

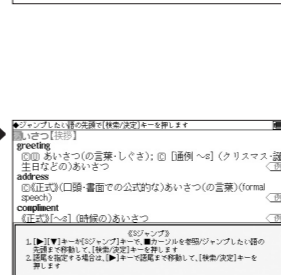


 
 

- The cursor (color-inverted) appears.


3 Move the cursor (color-inverted) using , , ,  to the desired word.



 


- English words or the word indicated by the jump mark () are selected in whole and their color inverted. You can also select an English word or the word indicated by the jump mark using  and skip the Japanese.

- To select a Japanese word, you must first mark the start and end points.


Using the mark on the display


Appearance of the marks , , ,  or similar on the detailed display indicates more information related to the entry is available, such as example sentences, explanations, notes, illustrations or diagrams.






Press  to select the first mark and the color of the mark is inverted.

Press , , ,  to move the highlight to the desired mark and press  to display the contents.






 
To exit, press  twice.


When the  mark appears, audio of the displayed information can be played back.

    Press  to select the first mark and the color of the mark is inverted.









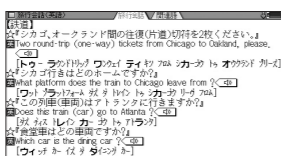
Press , , ,  to move the highlight to the desired mark and press  to play back the contents.

Example: Play back the audio using “ 旅行会話 英語.”

  1 Press    and then press   .




2 Press  to invert the  mark.

- If there are several  marks on the display, move the highlight using , , ,  to select the desired mark.
- If there is more information outside the window, press   or   to scroll the window.




3 Press .

Playback of the contents starts.



- To stop the playback, press . To release the inverted color of , press  after playback.

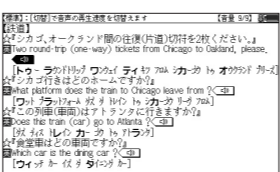

Changing the playback speed

  1 Press   .

 Playback speed display changes from “medium” to “slightly slow” or from “slightly slow” to “medium.” (The default is “medium.”) A message is displayed momentarily followed by the menu display.

- Playback speed can also be adjusted by pressing  on the playback display ( indicated).

Map search function

You can search for information about a selected area (World Heritage Sites in Japan, hot springs, mountains, famous waters, secluded hot spring spots, etc.) through the contents.


You can search for World Heritage Sites from the world map.

Search by map of Japan

Example: Search for information about “ 北海道.”


1 Press   (.

The map search display appears.

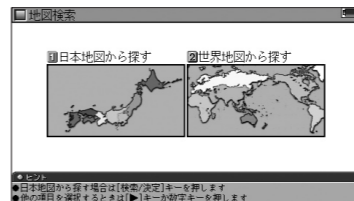


2 Press .

The area select display appears.

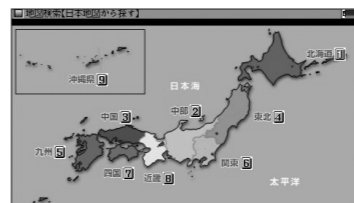




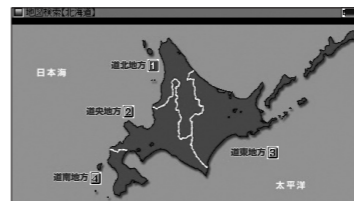



3 Press .

 The area select display appears set on Hokkaido.




To mark the word “ 言葉”

 
Move the cursor “” to the starting point “” and press . Then press  to move the cursor “” to the end point “.” (If you wish to mark a one letter word, you do not have to mark the end point.)

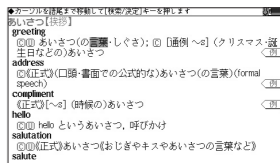


4 Press .


A list of candidates appears in the jump window.

- If the word is indicated with  or there is only one match, the detailed display appears in the jump window.

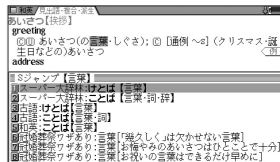

5 Press the number key that corresponds to the desired word (in this case .

The detailed display appears in the jump window.

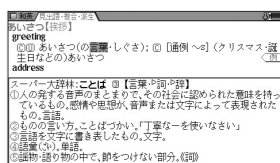


6 Press  to S-jump the display.

The detailed display of the selected word appears.

- To return to the previous display, press .

4 Press .

A list of information items appears.

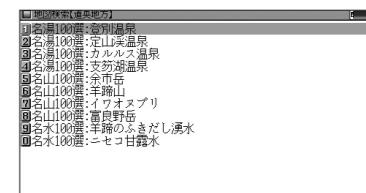

5 Select the desired item using the number keys.

The detailed display of the selected item appears containing the area information.

- To return to the previous display, press .